BASIC FAULT FINDING

Loss of cooling- Check power supply
- Check gasket is sealing properly
- Ensure that products are kept properly chilled prior to use

SPARE PARTS

Spare parts are available via your supplier or direct from Osborne Refrigerators. Replaceable parts include:

Door seal
Complete door
Hinges
Pinch valve mechanism
Container (complete with hosetail)
Hosetail as separate part
Milk tube
Fan motor
Temperature controller
Drip tray
Drip tray housing

OSBORNE REFRIGERATORS LTD
ROSE GREEN ROAD
BOGNOR REGIS
PO21 3EG

TELEPHONE +44 (0) 1243 267711


E-MAIL
service@osborne-ref.co.uk
WEBSITE
www.osbornerefrigerators.uk

2026 v2

OSBORNE REFRIGERATORS LTD

MD2 - Twin Tank Dispenser

INSTALLATION AND USER MANUAL

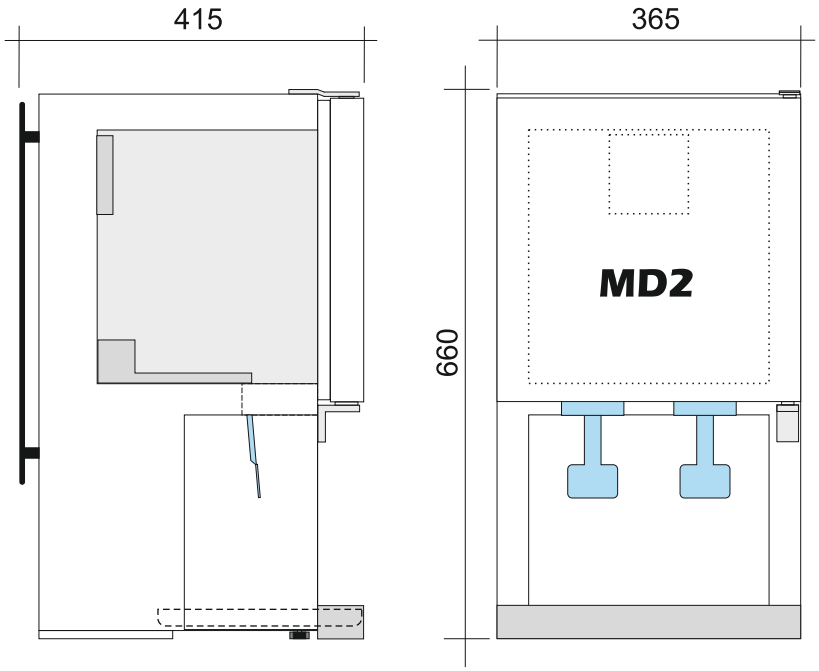

MADE IN BRITAIN

UNPACKING

Check the packaging for obvious signs of damage before unwrapping, and contact your supplier if you are concerned about its condition. If the cabinet has been stored horizontally in transit, allow it to stand upright for an hour before plugging power cord into supply.

ELECTRICAL CONNECTION

The cabinet is complete with a factory-fitted plug suitable for a 220 volt / 13amp socket outlet. This appliance **must b**e earthed.

LOCATION

Do not site the cabinet near a source of heat, such as a boiler or radiator, or in direct sunlight. This will conserve energy and reduce running costs. Do not place the cabinet on uneven or carpeted floors - only a solid surface ensures unrestricted air intake from below. Install the cabinet on a level surface - this will minimise vibration. The cabinet should be vertical or leaning fractionally backwards - it **must not** lean forward. The cabinet requires a 50mm (2") air gap behind and above for ventilation or overheating may occur.

TEMPERATURE SETTING

The temperature in this cabinet has been preset for the correct storage of milk and should require no adjustment (the thermostat is situated under the body of the cabinet to prevent accidental alteration).

RECOMMENDED OPERATION

This cabinet is designed to store fresh milk (or other drinks) in two containers. The product should always be kept properly refrigerated before transferring to the containers. When filling the container(s), ensure that the flexible pipe is correctly fed through the pinch valve first (see fig.1). Slide the valve out slightly, along with the container, and remove the top cover. Fill carefully to around 25mm from the top of the container, ease the full container and valve back into place, and replace the cover.



fig 1

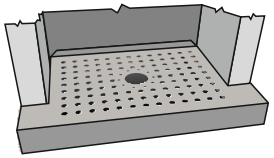


fig 2

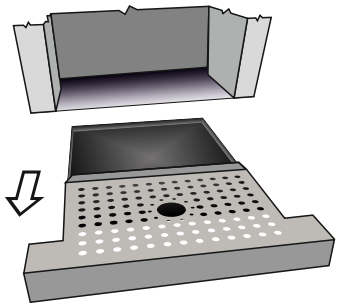


fig 3

DRIP TRAY & VALVES

The drip tray should collect any spilt or dripped milk. It also collects excess defrost water from the refrigeration system, so will need emptying and cleaning periodically. Carefully pull the cover forward (see over figs 2 & 3), the tray should come with it. The cover is dishwasher safe, but the plastic tray itself isn't and should be washed in warm soapy water. Return the tray and cover to their correct position after cleaning. The valves are also dishwasher safe.

If the unit is to be taken out of commission for a period of time, switch off at the mains and prop the door open to allow air to circulate.

CLEANING

The containers must be thoroughly cleaned before use

Before use, and periodically thereafter, clean the inside of the cabinet with a soft cloth and a solution of one teaspoon of Bicarbonate of Soda (Sodium Bicarbonate), to one litre (1¾ pints) of warm water. Rinse with clean water and dry thoroughly. Clean the outside of the cabinet as necessary with mild detergent and warm water. Rinse with clean water and dry thoroughly. Ensure that the door seal and the front edge of the cabinet are thoroughly cleaned.

Do not use abrasives of any kind on the cabinet.

Liquids spilt on the gasket will cause the door to stick which will tear the gasket. Please clean regularly as instructed above